
## <u>Instruction - Drawer Front Height Adjustment</u>

Step 1: Pull open the drawer to be adjusted;



Step 2: Pull the ramp latch (blue) toward Drawer Front to gain adequate drawer height; (Installer may need to lift the drawer during adjustment in case of heavy drawer.)

Drawer Front height adjustment range is [0mm, +2.6mm]

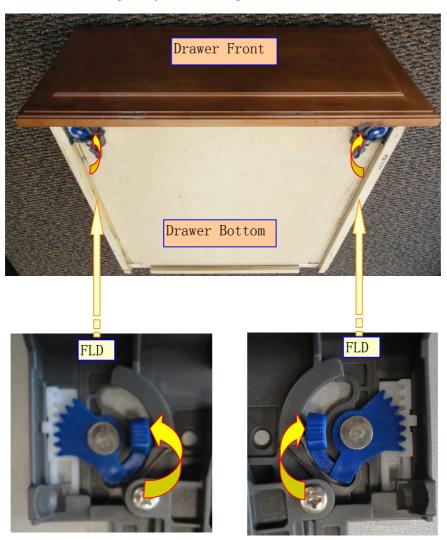

Step 3: Check the Drawer Front is aligned left to right. If necessary, repeat Step 2.

